


FIA LED MODULE Definition V7

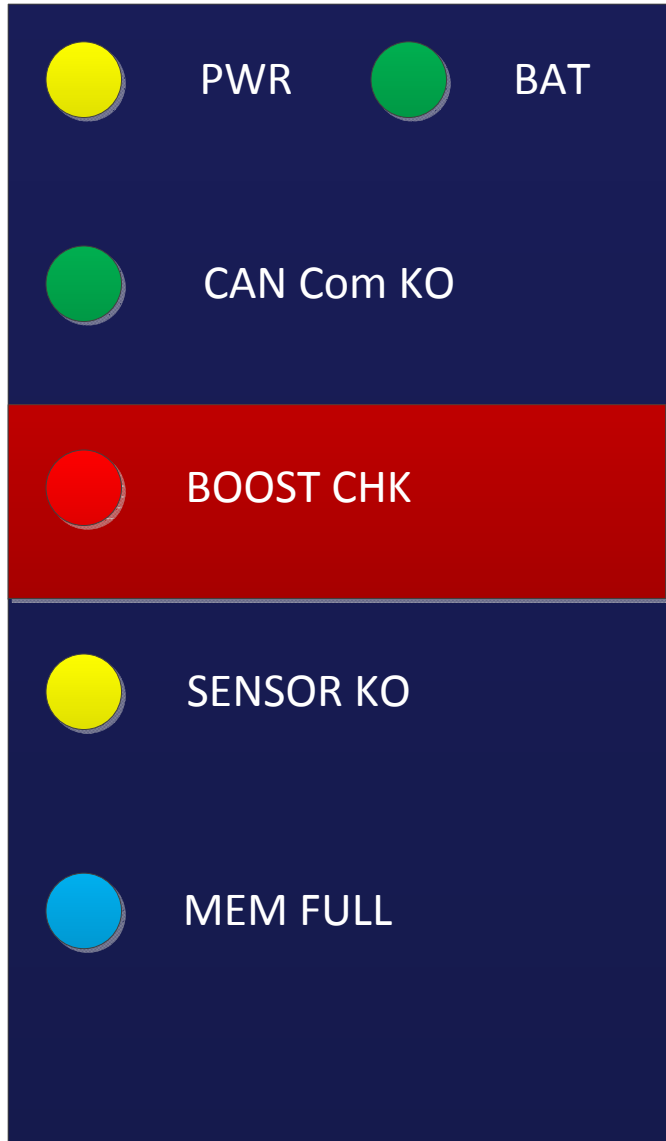

PWR

ON : POWERED BY CAR (Vbatt > 10V)
OFF : NOT POWERED
BLK : POWERED BY BATTERY

BAT

OFF : OK
ON : Accident detected
BLK : BATTERY DISCHARGE (< Batt Led alarm threshol)

CAN Com KO

OFF : CAN COMM OK
BLK : CAN COMM NOT OK
BLK Quick : EMM ADR error (CAN link OR Status NOK OR YawRate stuck). ONLY when car not moving

BOOST CHK

OFF : OK
ON : Overboost alarm
BLK : OverFuel pressure alarm
(Deleted only by FIA Personnel)

SENSOR KO

OFF : OK
ON : At least one sensor HS now
BLK : At least one sensor memorize HS
(Reset after power off)

MEM FULL

OFF : OK
ON : Overrevs alarm (Deleted only by FIA Personnel)
BLK : Internal logger memory over close to full threshold
BLK Quick : USB stick error (not connected OR format cluster size NOK OR memory close to full threshold). ONLY when car not moving

RED FLAG (WRC ONLY)

If a red flag is received from the tracking box, all the LED will blink at high speed

BLK : Blink low speed (0.8s)
BLK Quick : Blink high speed (0.4s)