


Scan
Barres-code


Select place
Password : 2019

Scan
RFID

Stand by :
Push max 2s

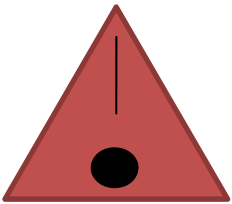

Never turn off the PDA completely


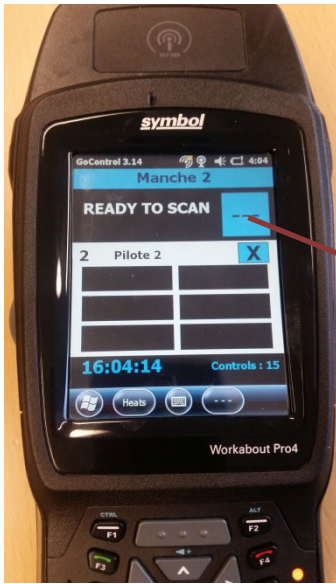


Manual insertion tire number:

Push here

Enter the number using the keypad

And confirm with OK

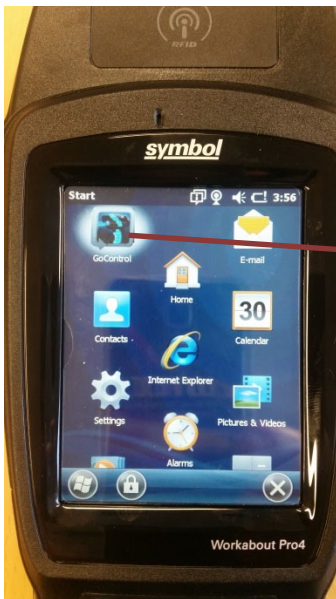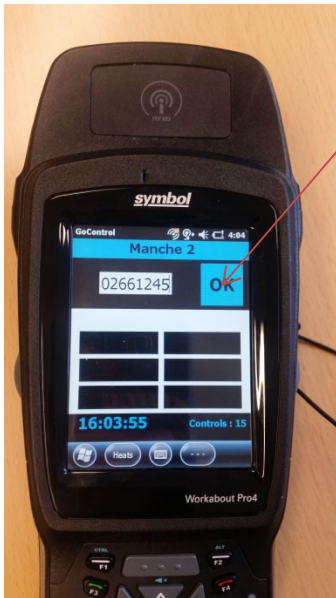

The program used to control the tires may go into the background on the PDA.

At this time it must be restarted by clicking on the icon GoControl